




Thank you for your purchase from Framesbymail.com. If you have any questions regarding these instructions or your order, please call us at 800-332-2467 or email us at framesinfo@framesbymail.com.

Wood Frame Assembly

(If your frame is assembled—skip to step 2)


1. If your wood frame is unassembled, line up each of the four corners without wedge pieces to the corresponding corners with the plastic wedge pieces. Apply a small amount of glue to each mitered corner and then slide them together.

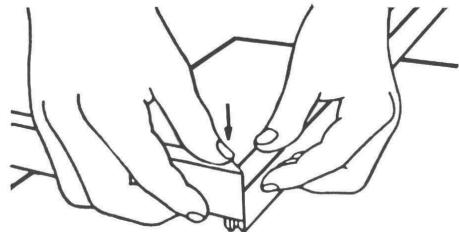

2. Lay frame face down and place the plexi, matting, your artwork, and then the backing into the frame.

*****The plexi has a white or blue masking on both sides that makes it look like cardboard. Peel this off before using. *****

3. Screw the metal mounting brackets directly into the backside of the frame and then swivel the end without the screw hole over the backing to hold it into the frame.

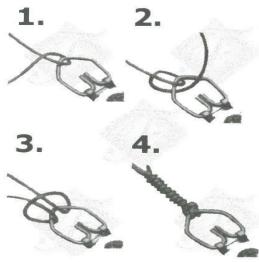

4. Attach wire hangers on each side of the frame 1/4 of the total height down from the top. Loop wire (not included) as illustrated to the left on the first hanger, and then repeat for the second hanger. Your frame is now ready for hanging.

